



Maintenance instruction for oiled CROWNBAMBOO® floorings

By the surface treatment with oil the bamboo parquet already received a protection and is largely resistant against intrusion of water and dirt.

According to the stress, each type of surface treatment is subject to a natural wear and tear. For this reason a periodical cleaning and maintenance is necessary.

Damages or coarse soiling can be partially repaired by chipping with steel wool, grinding or by treating with a green pad and once more treatment with maintenance oil..

Tables and chairs have to be equipped with suitable felt pads. Sufficient large clean running zones should be arranged.

At usage of chairs with castors use only soft rolls according to DIN 68131, additional recommended is the usage of suitable base plates, e.g. roll mats.

The maintenance cleaning is always out, when the flooring is dirty.

Thereby the coarse dirt is removed with a mop, broom or a vacuum cleaner because these soiling take effects like sanding paper and having to be removed immediately.

Remove fine dirt or dust with a slightly wet cloth. Add to the cleaning water a suitable cleaning agent. The maintenance is carried out with maintenance oil.

The oil is implicated thinly and equally spread. Let no over plus stand on the surface. The surface are cleaned and new impregnated at the same time. After 12 hours drying time the surface can be used again.

The maintenance with maintenance oil is always then carried out, when the flooring shows wear and tear characteristics on the surface treatment.

In the living area the maintenance often is only two to four times necessary. In schools, restaurants or corridors according to the stress under circumstances every 14 days

Maintenance oil contains inflammable solvents. Care for good air ventilation.

Saturated cloths or pads can inflame themselves. Therefore it is imperative to clean the tools immediately after usage and to store them in closed vessels or under water. After the drying the cloths or pads can disposed to normal garbage.

This maintenance instruction is valid for bamboo parquet, which has been installed according to DIN 18356-parquet work and DIN 18367 for woodwork, which has been oiled and is maintained with maintenance oil.

By means of the not film flooring and permeable surface treatment, the bamboo is not hindered in its respiratory activity. But pay also attention to, that bamboo is a natural material, which is influenced by the respective temperature and air humidity, so that material and room climatic caused interactions take place.

At relative high moisture of the surrounding the bamboo flooring takes up moisture and enlarges its volume. At relative low moisture of the surrounding e.g. during the heating period in winter, the bamboo flooring releases and joints occur. However rate this behaviour not the bamboo parquet. Care for additional air moistening during the heating period. This helps not only the parquet flooring but also the well being and the health of the residents.

At a temperature of 18°C to 20°C and a relative air humidity of 50% - 60% the ideal room climate is reached.